



THE FIRST IN SPACE

Yuri Gagarin took the Sturmanskie watch, made by special order, into space on April 12, 1961. In weightlessness the watch worked flawlessly.


Since 1961 the Sturmanskie have been the official watch of the Soviet and Russian cosmonauts, which helped in difficult situations, withstanding severe tests in zero gravity, magnetic fields, extreme shocks, vibrations and temperatures

MODEL 6S11/21 MIYOTA

STURMANSKIE

MODEL 6S11/21 MIYOTA

BATTERY : SR927SW

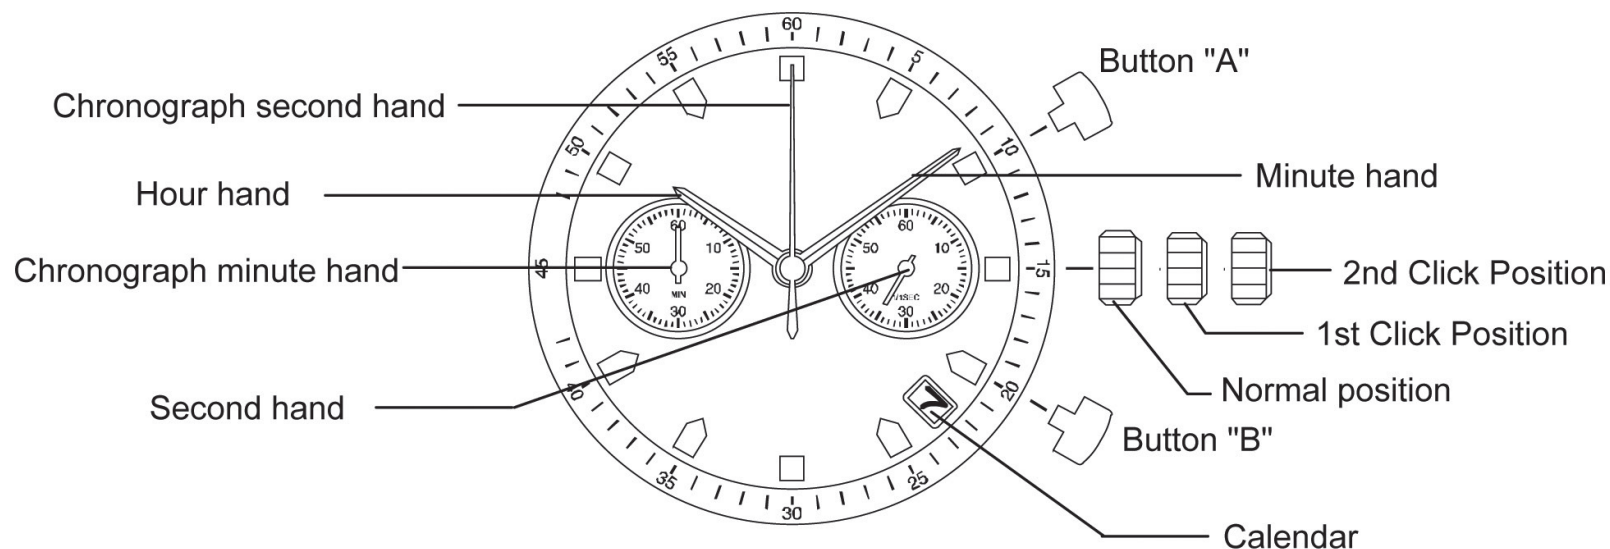

SETTING THE TIME/DATE

To set TIME - Pull the crown out to the 2nd Click Position.

Turn the crown clockwise to set hour and minute hands.

To set DATE - Pull the crown out to the 1st Click Position.

Turn the crown clockwise to set the date.

* If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change on the following day.

After the date/time has been set, push the crown back to the Normal position.

STURMANSKIE

USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/4 second united up to maximum of 59min 59sec.

Measuring time with the stopwatch

1. Press button “ A “ to start the chronograph.
2. The chronograph can be started and stopped each time button “A” is pressed.
3. Press button “B” to reset the chronograph and chronograph minute and second hands return to their Zero positions.

MODEL 6S11/21 MIYOTA

CHRONOGRAPH RESET (INCL. AFTER REPLACING BATTERY)

This procedure should be performed when the chronograph second hand does not return to the Zero position.

1. Pull the crown out to the 2nd Click Position.
 2. Press the button “A” once to set the chronograph second hand to the Zero position.
- * The chronograph hand can be advanced rapidly by continuously pressing button “A”.
3. Once the hands are set at Zero position, reset the time and return the crown to its normal position.



STURMANSKIE

WARRANTY AND MANUFACTURER INFO

The manufacturer warranty period is valid for 12 months from the purchase date. In each country of sale the legal, country-specific guarantee conditions apply. The customer shall not have any claim under this warranty if:

- the watch does not have warranty card;
- the watch has been repaired by unauthorized service center or person;
- the watch is not used in accordance with the Instructions supplied in this User's Manual.

The Warranty does not cover the watch-case, crystal, band, bracelet and packing. If hidden faults are detected during the warranty period, the watch can be repaired at the warranty watch service shop marked by your local distributor. The right for warranty service is provided by the guarantee certificate attached to the given warranty-card of your watch. The claims on watch replacement or repayment are satisfied upon submission of the certificate from the guarantee service.

manufacturer and distributor:

VOLMAX GROUP LTD

MARKSISTSKAYA STREET, 34, B. 5

109147, MOSCOW

TEL. +7 495 911 32 10

volmax@aviatorwatch.ru

www.sturmanskie.ru