



THE FIRST IN SPACE

Yuri Gagarin took the Sturmanskie watch, made by special order, into space on April 12, 1961. In weightlessness the watch worked flawlessly.


Since 1961 the Sturmanskie have been the official watch of the Soviet and Russian cosmonauts, which helped in difficult situations, withstanding severe tests in zero gravity, magnetic fields, extreme shocks, vibrations and temperatures


MODEL NE 88

STURMANSKIE

MODEL NE 88

Movement SEYKO Japan.

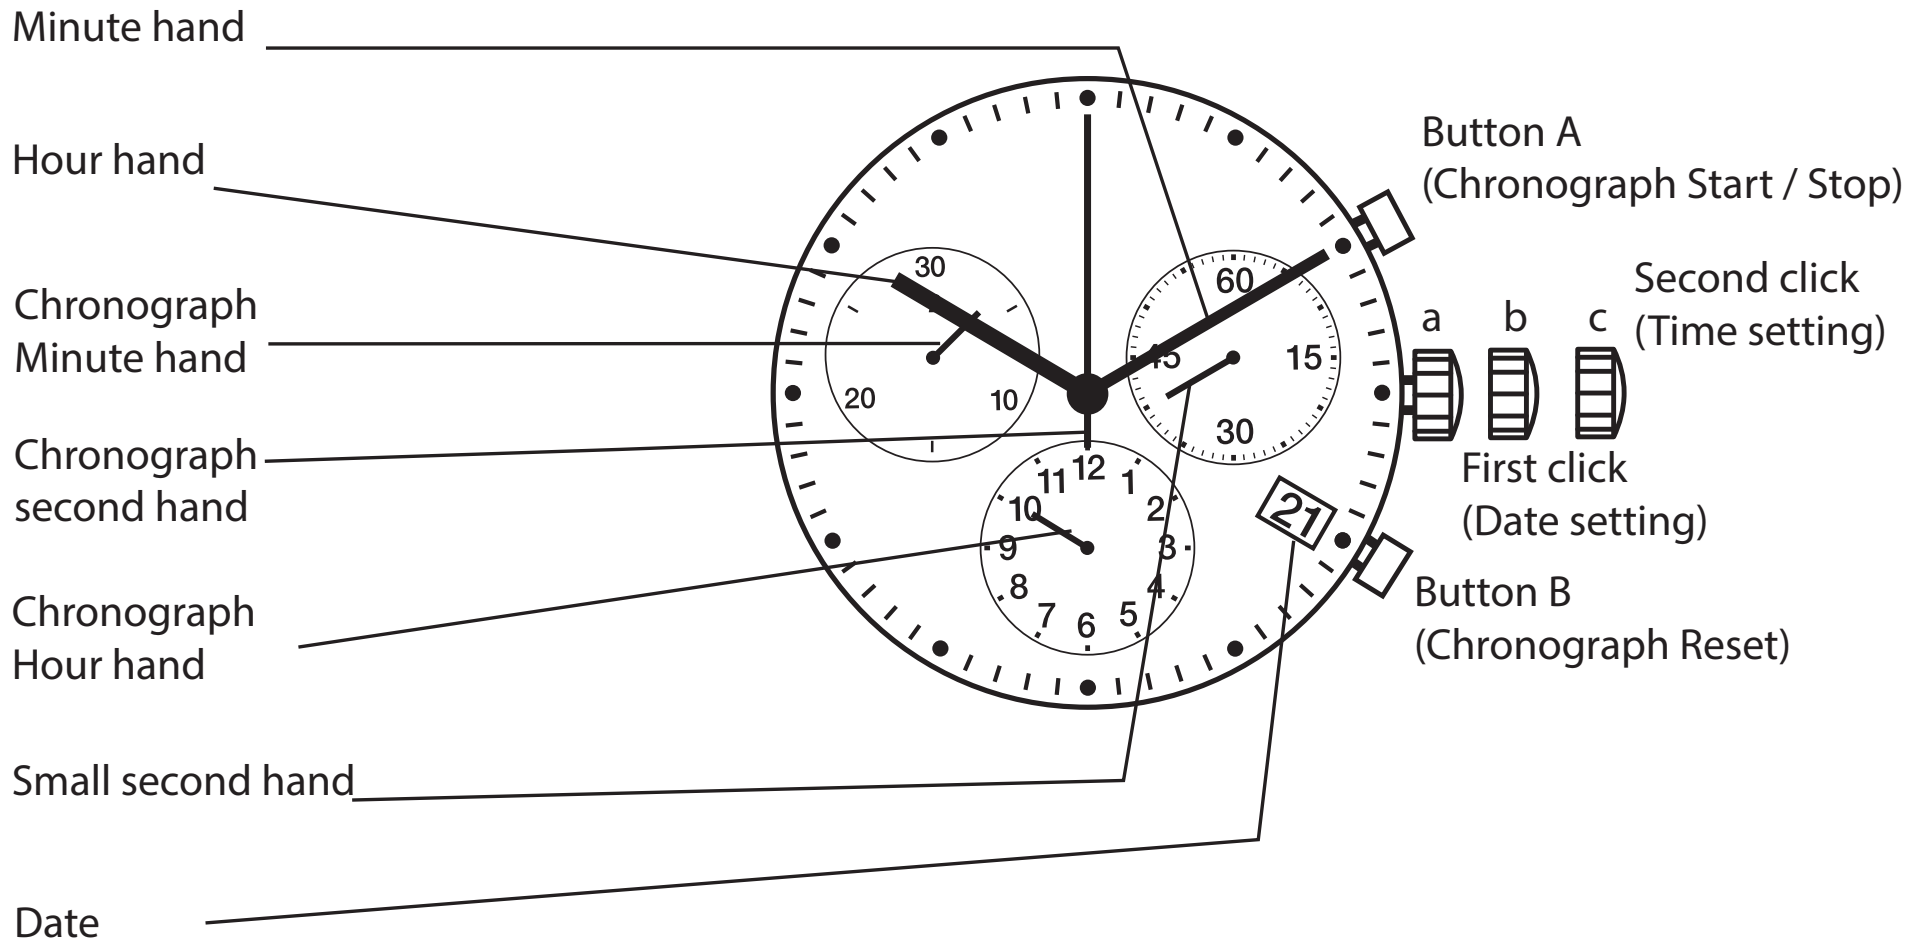


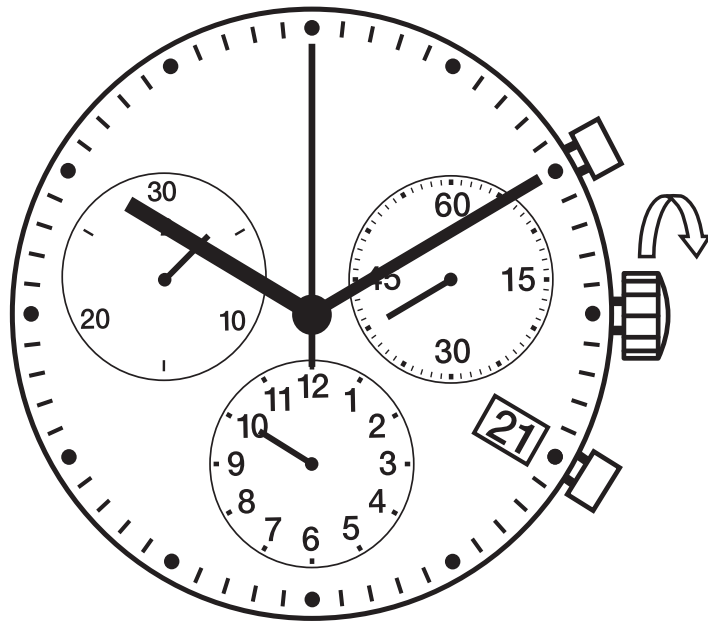

How to set the time

- 1) Pull out the crown to the second click position.
- 2) Turn the crown to set hour and minute hands.
(Check that AM / PM is set correctly.)
- 3) Push the crown back into the normal position.

During time setting, if the chronograph is started, chronograph hour and minute hands will rotate simultaneously. This is not a malfunction. Please reset chronograph by pushing button B. Chronograph hour and minute hands will return to their reset positions.

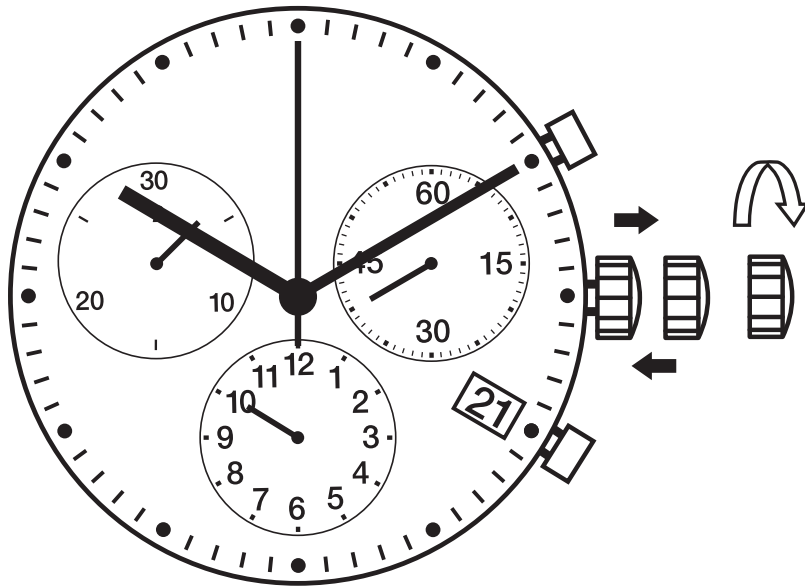

How to set the date

- 1) Pull out the crown to the first click position.
- 2) Turn the crown to left for date setting.
- 3) Push the crown back into the normal position.

To wind up the mainspring

- 1) Manual winding ... Rotate the crown clockwise at normal position.

Fully wound up by turning the crown minimum 55 times.

Fully wound up by turning the ratchet wheel screw 8 times it will start to move naturally shaking slightly.

 
- 2) To wind up with winding machine.

Rotary speed : 30 rpm

Operating time : 60 minutes


Do not set the date between 8:00 P.M. and 2:00 A.M. as this will cause a malfunction.

How to use the chronograph

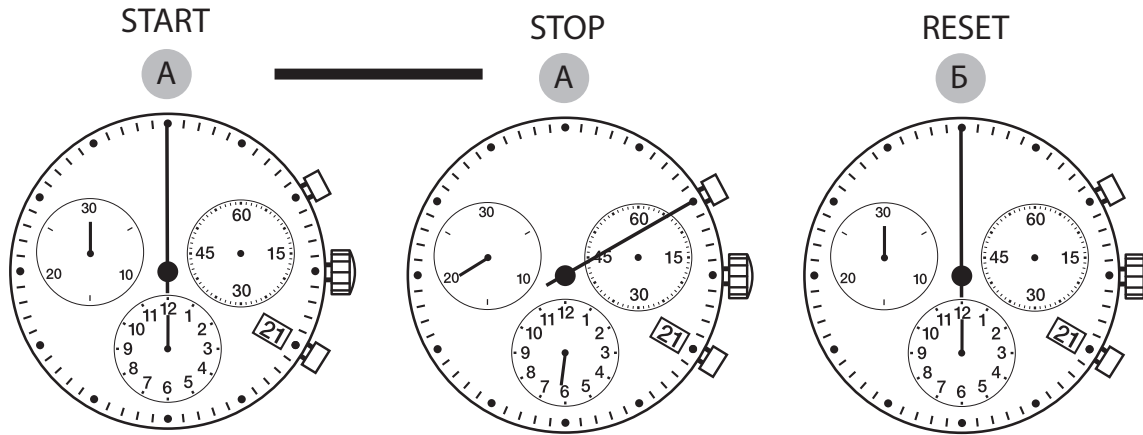

6 ° 20' 10"

 Accumulated elapsed time measurement

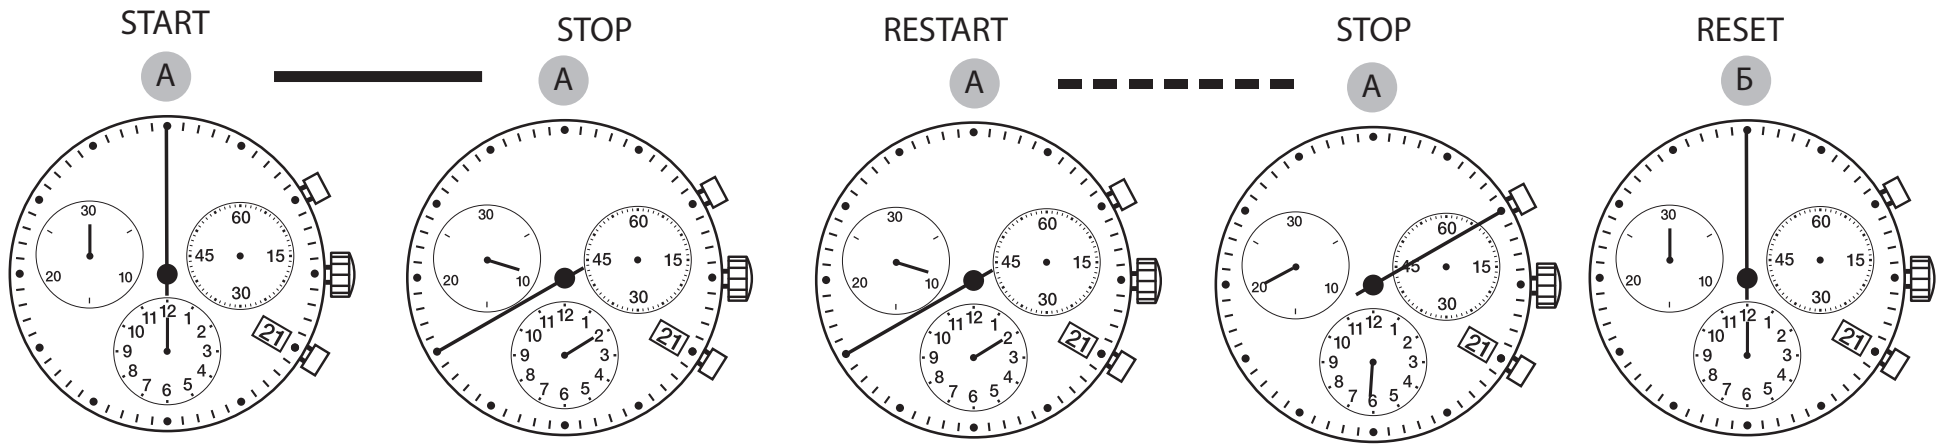

2 ° 8' 40"

6 ° 20' 10"



STURMANSKIE

WARRANTY AND MANUFACTURER INFO

The manufacturer warranty period is valid for 12 months from the purchase date. In each country of sale the legal, country-specific guarantee conditions apply. The customer shall not have any claim under this warranty if:

- the watch does not have warranty card;
- the watch has been repaired by unauthorized service center or person;
- the watch is not used in accordance with the Instructions supplied in this User's Manual.

The Warranty does not cover the watch-case, crystal, band, bracelet and packing. If hidden faults are detected during the warranty period, the watch can be repaired at the warranty watch service shop marked by your local distributor. The right for warranty service is provided by the guarantee certificate attached to the given warranty-card of your watch. The claims on watch replacement or repayment are satisfied upon submission of the certificate from the guarantee service.

manufacturer and distributor:

VOLMAX GROUP LTD

MARKSISTSKAYA STREET, 34, B. 5

109147, MOSCOW

TEL. +7 495 911 32 10

volmax@aviatorwatch.ru

www.sturmanskie.ru